

CERTIFICATE OF APPROVAL No 5/6J/1

This is to certify that the patterns of the

Gilbarco Flowmeter (Drum-filler) with Tokheim Meter Models
1450-20-SP-4-GB and Others

submitted by Gilbarco Australia Ltd,
16-34 Talavera Road,
North Ryde, New South Wales, 2113,

have been approved under the Weights and Measures (Patterns of Instruments)
Regulations as being suitable for use for trade.

Date of Approval: 7 March 1978

The patterns are described in Technical Schedule No 5/6J/1, and in
drawings and specifications lodged with the Commission.

The approval is subject to review on or after 1 March 1983.

All instruments conforming to this approval shall be marked with the
approval number "NSC No 5/6J/1".

Approval is granted on condition that:

1. The maximum flow rate is a flow rate between 270 and 450 L/min.
2. The viscosity of the liquid measured is between 0,4 and 200 mPa.s.
3. The liquid (commercial or technical name) for which the instrument is
verified is nominated on the instrument data plate.
4. The pump suction operates under a positive liquid head.
5. The supply tank is of sufficient capacity to ensure that the liquid in
the tank does not fall to a level at which air could be drawn into the
pump or a device is fitted to prevent the level of the liquid falling to
a level at which air could be drawn into the pump.

Signed



Acting Executive Officer

31/5/78



NATIONAL STANDARDS COMMISSION

TECHNICAL SCHEDULE No 5/6J/1

Pattern: Gilbarco Flowmeter (Drum-filler) with Tokheim Meter Models
1450-20-SP-4-GB and Others

Submittor: Gilbarco Australia Ltd,
16-34 Talavera Road,
North Ryde, New South Wales, 2113.

Date of Approval: 7 March 1978

Conditions of Approval:

1. The maximum flow rate is a flow rate between 270 and 450 L/min.
2. The viscosity of the liquid measured is between 0,4 and 200 mPa.s.
3. The liquid (commercial or technical name) for which the instrument is verified is nominated on the instrument data plate.
4. The pump suction operates under a positive liquid head.
5. The supply tank is of sufficient capacity to ensure that the liquid in the tank does not fall to a level at which air could be drawn into the pump, or a device is fitted to prevent the level of the liquid falling to a level at which air could be drawn into the pump.

All instruments conforming to this approval shall be marked "NSC No 5/6J/1".

Description:

The pattern (see Figure 1) is a flooded-suction drum-filling flowmeter.

The flowmeter comprises the following:

1. Supply tank.
2. Pump — a positive or non-positive displacement pump, mounted lower than the minimum height of the liquid in the supply tank.
The supply pipe from the tank has a continuous fall to the pump.

31/5/78

.../2

Provision is made for a pressure gauge to be connected to the suction side of the pump.

The pump is for the exclusive use of the flowmeter, that is, without alternative outputs; alternatively the flowmeter flow rate stays within the approved flow-rate range for all combinations of alternative uses of the output from the pump.

3. Non-return valve in the pipe between the pump and the gas purger, or an arrangement of the components and piping to keep the system full of liquid at all times.
4. Tokheim 1506A-20 gas purger and strainer.*
5. Tokheim 1450-20-SP-4-GB 50-mm offset meter (see Figure 2).
6. Veeder-Root 1624 zero-start indicator with a scale interval of 1 litre; the first element is marked with ten scale-mark lines numbered from 0 to 9 (see Figure 2). The aperture through which the first element is viewed is widened in the direction of travel.
7. Preset counter** — a Veeder-Root VR 1646 preset counter may be fitted (see Figure 2). The counter may cause the outlet-control valve to close in one or two stages. When the preset counter is fitted the meter is known as a Tokheim 1450-20-SP-10-GB 50-mm offset meter.
8. Outlet-control valve, Tokheim 1551 (see Figure 2) — which is fitted when the preset counter is fitted, may be closed manually or by the preset counter.
9. Outlet-control valve — a manual valve is fitted when the Tokheim 1551 valve is not fitted.
10. Hose of up to 1,5 metres in length.
11. Nozzle — Gilbarco T285A; an integral anti-drain valve ensures that the meter and hose are not drained.
12. Sealing —
 - (a) the meter calibration, cover-plate bolts and the attachment-mounting bolts are sealed with a sealing wire, the ends of

* The gas purger and strainer is not a part of the measuring instrument examined and approved by the Commission; its inclusion is approved by the Commission only on the basis that it may be used as a strainer and/or to minimise possible damage to the meter in the event of a breakdown or other incident permitting free gas in the supply pipe upstream of the meter.

** The preset counter is not a part of the measuring instrument examined and approved by the Commission; its inclusion is approved by the Commission only on the basis that it facilitates the measurement of a set quantity of liquid and its use does not affect the performance of the measuring instrument.

which are terminated beneath a fixed lead-plug seal (see Figure 3); and

- (b) a data plate marked "approved for ...x...", x being the name of the specific liquid for which the instrument is verified*, is attached to the instrument either by the above sealing wire or by a lead-plug seal (see Figure 3).

The approval includes the following:

1. A Veeder-Root 7085 zero-start single-handle reset indicator and ticket printer (see Figure 4). The ticket printer has 1-litre increments and the indicator has a 1-litre scale interval; the first element is marked with ten scale-mark lines numbered from 0 to 9. The aperture through which the first element is viewed is widened in the direction of travel. The meter is then known as a Tokheim 1450-20-SP-11-GB meter and as a Tokheim 1450-20-SP-6-GB meter when the Veeder-Root 1646 preset counter and Tokheim 1551 outlet-control valve are not fitted.
2. A Tokheim 50-mm inline meter Model**

* The approval is for each of the following specific liquids and is based upon the liquid having a viscosity within the range specified for temperatures of 5°C to 40°C, taking into account the variations in the viscosity of each product which occur with the output from a single refinery or between different refineries and at different times throughout the year.

| <u>Liquid¹</u> | <u>Permitted viscosity range</u> |
|---------------------------|----------------------------------|
| Petrol | 0,4 to 0,7 mPa.s |
| Kerosene ² | 0,6 to 2,2 mPa.s |
| Heating oil ³ | 1,1 to 4,0 mPa.s |
| Diesel fuel | 1,7 to 8,3 mPa.s |
| ⁴ | 8,3 to 200 mPa.s |


- Note:
- ¹ A known trade abbreviation of the name of the liquid is acceptable.
 - ² "Kerosene" includes white spirits and aviation turbine fuel.
 - ³ Petrols, kerosenes and heating oil have a viscosity of less than 3 mPa.s at 20°C.
 - ⁴ Name of the specific liquid petroleum to be inserted.

- **
1. Model 1400-20-SP-4-GB when Veeder-Root 1624 indicator fitted.
 2. Model 1400-20-SP-6-GB when Veeder-Root 7085 indicator and ticket printer fitted.
 3. Model 1400-20-SP-10-GB when Veeder-Root 1624 indicator, VR 1646 preset counter and Tokheim 1551 outlet-control valve fitted.
 4. Model 1400-20-SP-11-GB when Veeder-Root 7085 indicator and ticket printer, VR 1646 preset counter and Tokheim 1551 outlet-control valve fitted.

Special Tests:


1. The instrument should be tested with the liquid for which it will be used and which is marked on the instrument data plate.
2. If a device is fitted to prevent the level of the liquid in the supply tank falling to the level of the pump, at least one delivery should occur during which the device stops the delivery. It will be necessary to refill the supply tank to finish the delivery into the proving measure. The effect of gas on the quantity delivered should not exceed 0,5 litre.
3. Minimum delivery — the minimum delivery will be 100 litres when a ticket printer is fitted and 25 litres when only an indicator is fitted.
4. Flow rate — if the pump has alternative outputs, check that the meter flow rate stays within the approved flow-rate range for all combinations of alternative uses of the output from the pump, that is, 5 : 1 flow-rate range.
5. Positive head — a pressure gauge fitted to the inlet side of the pump should indicate a positive head at all flow rates.
6. Test delivery — if the test delivery is less than 10 times the minimum delivery, inspectors should ensure that the non-flow-dependent error (reading error of the indicator or rounding error of the ticket printer) is minimised by making the delivery end at a graduation line.

FIGURE 5/6J/1 - 1

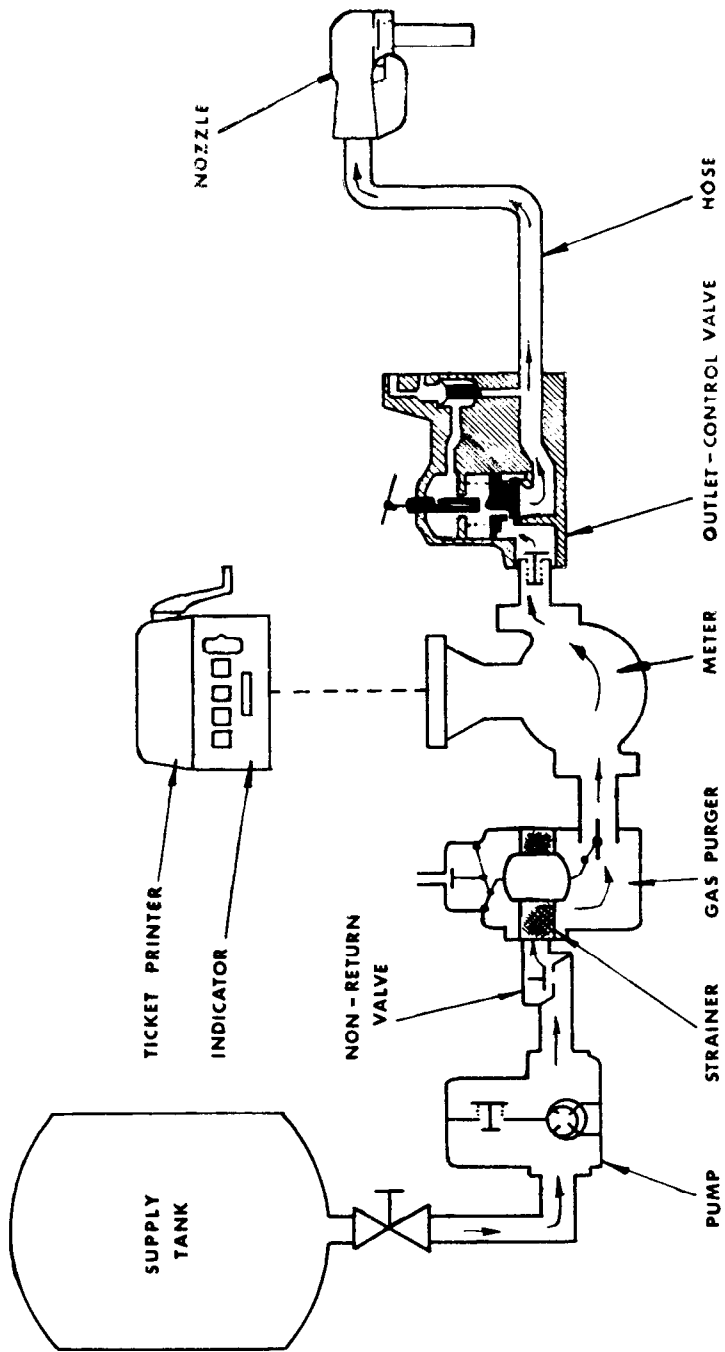


Tokheim drum-filler — Schematic Diagram

FIGURE 5/6J/1 - 2

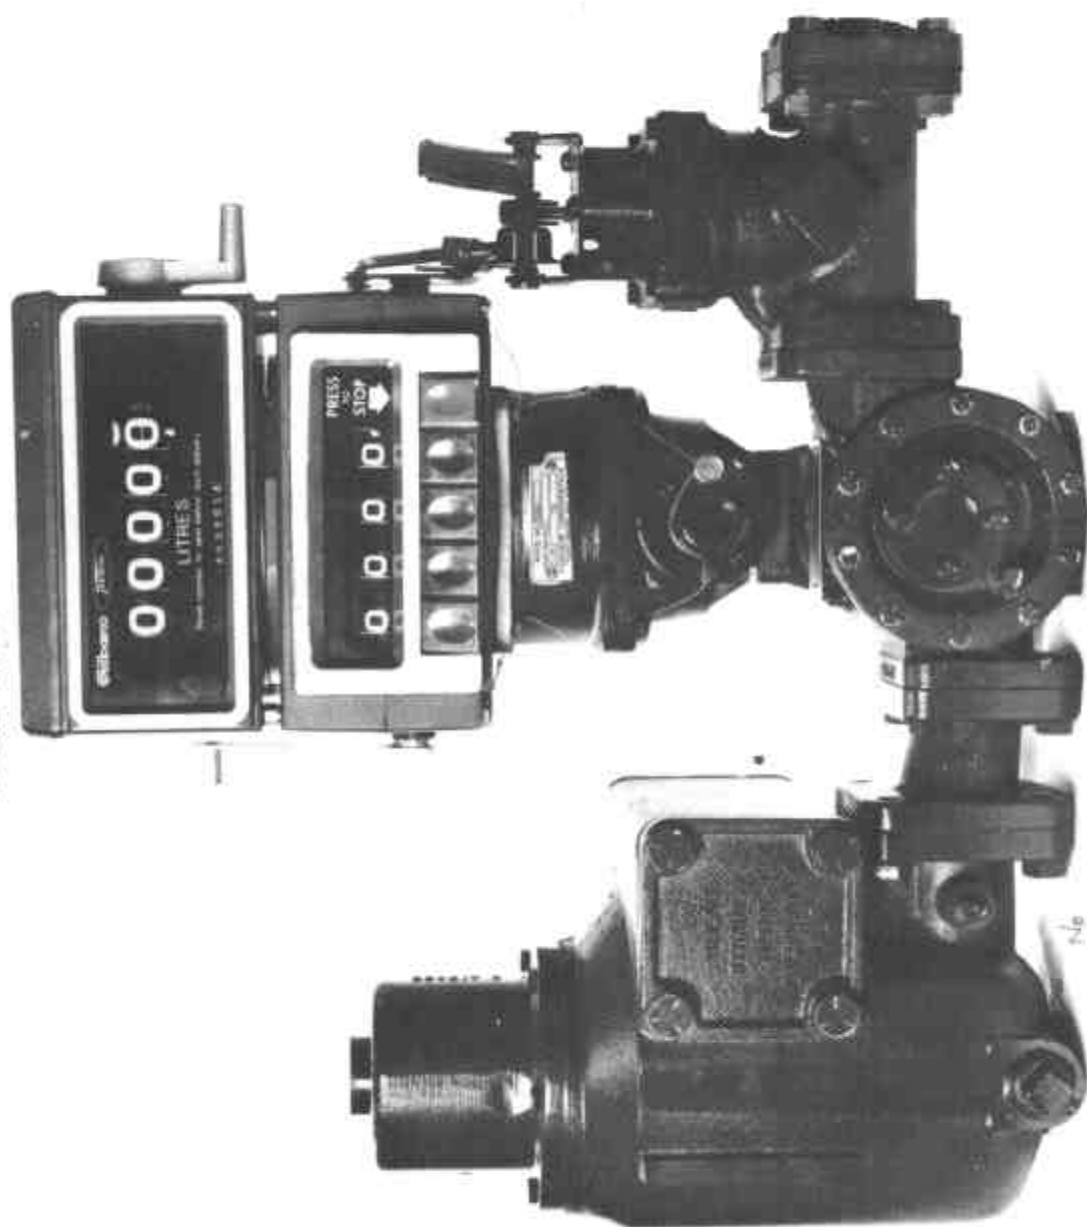

Tokheim 1450-20-SP-10-GB Meter with Gas Purger, Preset Counter,
Veeder-Root 1624 Ind. Itor and Outlet-control Valve
(Note: Tokheim 1450-20-SP-4-GB Meter when Preset is not fitted)

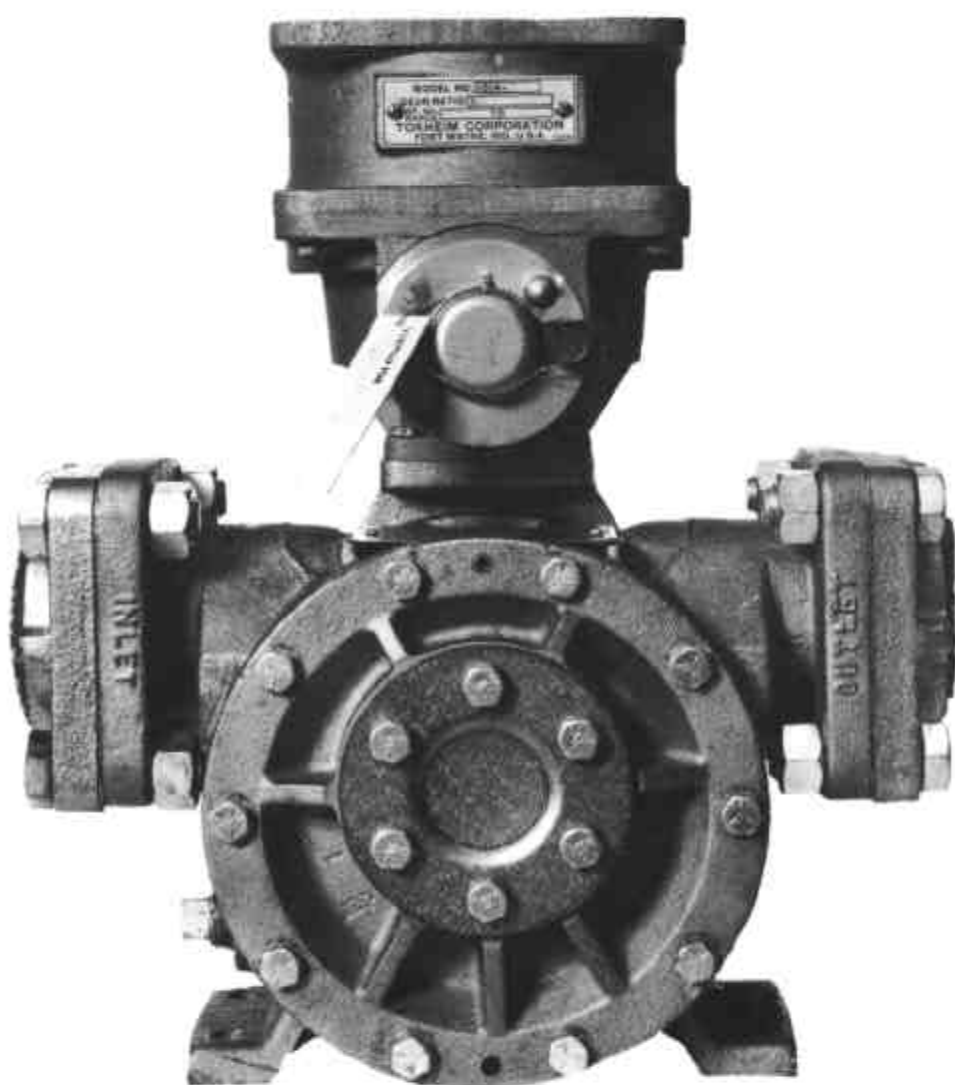

NO.

Tokneim 1400-20-SP-4-GB Inline Meter with
Data Plate attached to Meter Sealing Wire
(Sealing of Indicator not shown)

31/5/78



Tokneim 1450-20-SP-11-GB Meter with Gas Purger,
Preset Counter, Veeder-Root 7085 Indicator and
Ticket Printer and Outlet-control Valve
(Note: Tokneim 1450-20-SP-6-GB Meter when Preset is not fitted)

31/5/78